


CHIAYO

Operation manual

SM-5016


UHF Belt-pack Transmitter

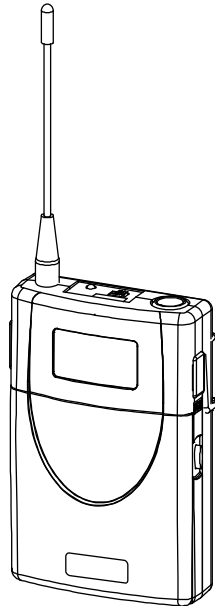

CHIAYO ELECTRONICS CO.,LTD.

Parts and functions

1. Antenna
2. Battery weak/audio mute indicator
3. Audio mute switch
4. Audio input connector (mini XLR)
5. LCD
6. Charging port
7. Cover release button
8. Power button
9. High-impedance gain control (GT)
10. Low-impedance gain control (MT)
11. Setting button
12. Up button
13. Down button
14. Battery compartment
15. Charging contacts

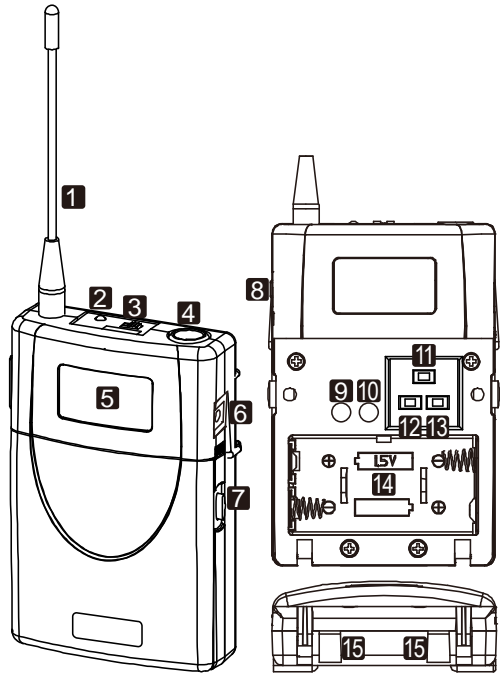


Battery installation & indicator



When the transmitter is switched ON, a red LED ② will blink once to denote the batteries installed are in good condition.



 If the LED remains illuminated, it means the batteries are weak and require replacement.




This transmitter requires 2 x AA batteries to operate.

To install, remove the battery cover and slide the batteries into the battery compartment & replace the battery cover.


Note: Batteries contain a corrosive acid that may leak and damage the transmitter when stored for a long period. Batteries should be removed from the transmitter before storing without use for more than 4 weeks.

Channel setting


- 1 Use **UP▲** / **DOWN▼** button to go to the CHANNEL | FREQUENCY page.

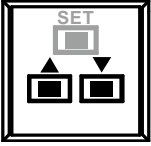


- 2 Press and hold the **SET** button for 2 seconds, then the upper-right channel number will flash to allow changes to be made.

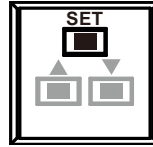

- 3 Press **UP▲** / **DOWN▼** buttons to change the channel number. The corresponding frequency will change accordingly.

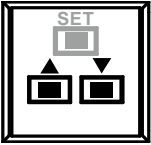


- 4 After selecting a channel, press and hold the **SET** button for 2 seconds or wait 9 seconds to save the setting.

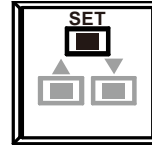


Battery type setting


- 1 Use **UP▲** / **DOWN▼** button to go to the BATTERY TYPE page.

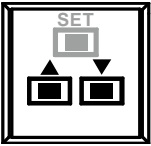


- 2 Press and hold **SET** button for 2 seconds, then the cursor ← will flash to allow changes to be made.

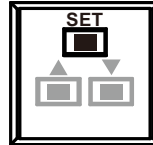

- 3 Press **UP▲** / **DOWN▼** button to select either **NIMH** (rechargeable battery) or **AKLN** (alkaline battery).

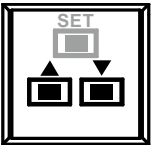

- 4 After selecting the battery type, press and hold the **SET** button for 2 seconds or wait 9 seconds to save the setting.

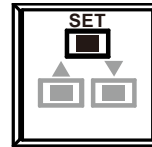


IMPORTANT: NiMH battery must be selected when rechargeable battery is being used. Never select AKLN (alkaline) when transmitter is intended for charging as alkaline battery isn't rechargeable. Wrong battery selection will result in battery sensing electronics to display wrong and misleading status information.

SM-5016 UHF Belt-pack Transmitter

GAIN setting

Gain control enables the user to set different output levels.

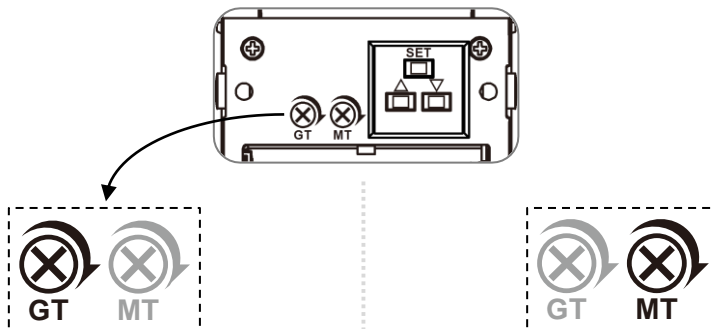

GT (LEFT) is for the use of instrument with high impedance, such as guitar.

MT (RIGHT) is for the use of low impedance such as lapel or headset microphones

CHIAYO ELECTRONICS CO.,LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw
Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan
Tel: 886-2-27415741 | Fax: 886-2-27525242
Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan
Tel: 886-5-2711000 | Fax: 886-5-5767611

